
TABLE OF CONTENTS
Part I

	Page
A Overview	
A 1 The capabilities of the ZLM 700/800 Software	A-1
A 1.1 Calibration software	A-2
A 1.2 Dynamic measurement software	A-3
A 2 Software structure	A-4
A 3 What do I find where in the manuals?	A-5
B Installation	
B 1 Minimum computer configuration required.....	B-1
B 1.1 Programs for Windows 2000/XP.....	B-1
B 1.2 Programs for Windows VISTA.....	B-2
B 2 Hardware installation.....	B-3
B 2.1 Required slots	B-3
B 2.2 Memory addresses.....	B-3
B 2.3 Installation of the card.....	B-4
B 3 Software installation	B-5
B 3.1 Initial installation	B-5
B 3.2 Complementary installation.....	B-7
B 3.3 Updating.....	B-9
B 3.4 Changed hardware resources.....	B-10
B 3.4.1 Operating system MS-DOS with MS-Windows 3.x	B-10
B 3.4.2 Operating system MS-Windows NT.....	B-11
C Handling the “Esox” Management Program	
C 1 Starting the management program.....	C-1
C 2 Windows of the management program	C-1
C 2.1 Program window	C-1
C 2.2 Application window.....	C-1
C 2.3 Working with menus.....	C-3
C 2.4 Activating application windows.....	C-3
C 2.5 Changing the size of application windows.....	C-4
C 2.6 Moving application windows.....	C-5
C 2.7 Menu options for arranging several application windows.....	C-6
C 3 Starting measurement programs.....	C-7
C 4 Exiting the management program	C-8

	Page
D	"ZLM Distance" - Dynamic Measurement Software
D 1	Starting the "ZLM Distance" program moduleD-1
D 2	Elements of the "ZLM Distance" windowD-1
D 2.1	Button fieldD-2
D 2.2	Numerical display fieldD-2
D 2.3	Real-time diagramD-3
D 2.4	Status lineD-3
D 2.5	Unit systemsD-4
D 3	Preparation for a measurementD-4
D 3.1.	Parameter setting for measurement data acquisitionD-5
D 3.2	Compensation of environmental influencesD-6
D 3.2.1	Atmospheric propertiesD-7
D 3.2.2	Material temperatureD-8
D 3.3	Laser aligning aidD-9
D 4	Measurement procedureD-10
D 4.1	Setting the reference point and specifying the dead distanceD-10
D 4.2	Starting the measurementD-11
D 4.3	Cancelling a measurementD-12
D 5	Analysis of a measurementD-12
D 5.1	Controls for diagram handlingD-13
D 5.2	Zooming of diagram segmentsD-13
D 5.3	ScrollingD-14
D 5.4	Marker cross-hairsD-15
D 5.5	StatisticsD-16
D 5.6	TablesD-16
D 5.7	Compiling a record (document)D-18
D 5.8	Fourier analysis, least squares line, and deviation from nominal positionsD-19
D 5.8.1	Fourier analysisD-19
D 5.8.2	Linear deviationD-20
D 5.8.3	Deviation from least squares lineD-20
D 5.8.4	Deviation from nominal positions ("expected values")D-20
D 5.9	Evaluation of previous measurementsD-22
D 5.10	Changing the scaling of diagram axesD-23
D 5.11	Exiting the diagram presentationD-23
D 6	Analysis of previous measurementsD-24
D 6.1	Changing the selected (highlighted) card fieldD-25
D 6.2	Opening and closing a card boxD-25
D 6.3	Shifting of file cardsD-26
D 6.4	Loading and unloading of file cardsD-26
D 6.5	Deleting a file cardD-28
D 6.6	Editing of cards and card box labelsD-28
D 6.7	Creating, renaming and deleting a card fileD-29
D 6.8	Quitting the Cardfile menuD-30
D 7	Exiting the measurement programD-30
E	"ZLM Angle" - Dynamic Measurement Software
E 1	Preparation for a measurementE-2
E 2	MeasurementE-2
E 3	Analysing of the measurementE-3

	Page
F	"ZLM Synchron" - Dynamic Measurement Software
F 1	Starting the "ZLM Synchron" program moduleF-1
F 2	Measuring axes and channels.....F-1
F 3	Elements of the "ZLM Synchron" windowF-2
F 3.1	Display and setting boxes F-2
F 3.2	Large numerical display F-5
F 3.3	Button field F-6
F 3.4	Real-time diagram..... F-6
F 3.5	Status line F-7
F 3.6	Unit systems..... F-7
F 4	Preparation for a measurement.....F-7
F 4.1	Parameter setting for measurement data acquisition F-8
F 4.2	Compensation of environmental influences F-10
F 4.2.1	Atmospheric properties F-11
F 4.2.2	Material temperature F-12
F 5	Measurement procedureF-13
F 5.1	Starting the measurement..... F-13
F 5.2	Cancelling a measurement F-14
F 6	Analysis of a measurement.....F-14
F 6.1	Controls for diagram handling..... F-14
F 6.2	Zooming of diagram segments F-16
F 6.3	Scrolling a diagram F-17
F 6.4	Autoscaling..... F-17
F 6.5	Adding and deleting of ordinates..... F-18
F 6.6	Marker cross-hairs F-18
F 6.7	Statistics F-19
F 6.8	Tables F-20
F 6.9	Compiling a record (document)..... F-21
F 6.10	Velocity, acceleration, Fourier analysis, least squares line and deviation from nominal positions ("expected values")..... F-22
F 6.10.1	Fourier analysis F-23
F 6.10.2	Linear deviation F-23
F 6.10.3	Deviation from least squares line F-24
F 6.10.4	Velocity and acceleration F-24
F 6.11	Rescaling of diagram axes..... F-24
F 6.12	Exiting the diagram presentation..... F-24
F 7	Analysis of previous measurementsF-25
F 7.1	Changing the selected (highlighted) card field F-26
F 7.2	Opening and closing a card box..... F-26
F 7.3	Shifting of file cards..... F-27
F 7.4	Loading and unloading of file cards F-27
F 7.5	Deleting a file card F-29
F 7.6	Editing of cards and card box labels F-29
F 7.7	Creating, renaming and deleting a card file F-30
F 7.8	Quitting the Cardfile menu F-31
F 8	Exiting the measurement programF-31

TABLE OF CONTENTS
Part II

	Page
G	“ZLM Position” - Calibration Software
G 1	Principles of measurement and analysis G-2
G 1.1	Methods of measurement G-2
G 1.2	Positioning methods..... G-3
G 1.2.1	Linear method G-3
G 1.2.2	Unidirectional linear method..... G-4
G 1.2.3	Oscillation ("Pendulum-step") method G-5
G 1.2.4	Quasi-pilgrim step ("Quasi-pilger") method..... G-6
G.1.3	Standard analysis procedures..... G-7
G 2	Operation G-13
G 2.1	Starting the "ZLM Position" program module G-13
G 2.2	Elements of the "ZLM Position" window..... G-13
G 2.2.1	Button field G-14
G 2.2.2	Numerical display field G-14
G 2.3	Unit systems..... G-15
G 2.4	Preparation for a measurement G-16
G 2.4.1	Parameter setting for measurement data acquisition G-16
G 2.4.2	Compensation of environmental influences G-19
G 2.4.2.1	Atmospheric properties..... G-20
G 2.4.2.2	Material temperature..... G-21
G 2.5	Measurement G-22
G 2.5.1	Laser aligning aid G-22
G 2.5.2	Synchronizing the displays G-23
G 2.5.3	Starting the measurement..... G-24
G 2.5.4	Errors occurring during a measurement G-25
G 2.6	Analysis of a measurement..... G-27
G 2.6.1	Controls for diagram handling..... G-27
G 2.6.2	Selection of standard and type of diagram..... G-28
G 2.6.3	Parameters..... G-29
G 2.6.4	Selection of the measured data to be included in the analysis G-30
G 2.6.5	Zooming and scrolling of the visible diagram segment G-30
G 2.6.6	Rescaling the diagram axes..... G-32
G 2.6.7	Tables G-33
G 2.6.8	Compiling a record (document)..... G-34
G 2.6.9	Exiting the diagram presentation..... G-34
G 2.7	Analysis of previous measurements G-35
G 2.7.1	Changing the selected (highlighted) card field G-36
G 2.7.2	Opening and closing a card box..... G-36
G 2.7.3	Shifting of file cards..... G-37
G 2.7.4	Loading and unloading of file cards G-37
G 2.7.5	Deleting a file card G-39
G 2.7.6	Editing of cards and card box labels G-39
G 2.7.7	Creating, renaming and deleting a card file G-40
G 2.7.8	Quitting the Cardfile menu G-41
G 2.8	Exiting the measurement program..... G-41
G 3	Analysis of position measurements by the template method G-42
G 3.1	Procedure..... G-42
G 3.2	Start of analysis..... G-44
G 3.3	Operation of the template method G-45
G 3.4	Repeat measurement G-46

	Page
H	"ZLM Angle / Straightness" Calibration Software
H 1	Measurement procedure H-1
H 2	Parameters H-3
H 3	Operation of the "ZLM Angle" and "ZLM Straightness" program modules H-5
H 3.1	Window elements H-5
H 3.2	Preparation for a measurement H-6
H 3.2.1	Preparation for an angle measurement H-6
H 3.2.2	Preparation for a straightness measurement H-7
H 3.3	Measurement procedure H-8
H 3.4	Analysis of a measurement H-8
H 3.5	Determination of parallelism and squareness deviations H-11
I	"ZLM Stat" - Measurement Software for Statistical Analyses
I 1	Standard measurement and analysis procedures I-1
I 1.1	Positioning methods I-1
I 1.1.1	Linear method I-2
I 1.1.2	Unidirectional linear method I-3
I 1.1.3	Oscillation ("Pendulum-step") method I-4
I 1.1.4	Quasi-pilgrim step ("Quasi-pilger") method I-5
I.1.2	Standard analysis procedures I-6
I 2	Operation I-15
I 2.1	Starting the "ZLM Stat" program module I-15
I 2.2	Elements of the "ZLM Stat" window I-15
I 2.2.1	Button field I-16
I 2.2.2	Display and setting boxes I-17
I 2.2.3	Large numerical display I-19
I 2.3	Unit systems I-20
I 2.4	Preparation for a measurement I-21
I 2.4.1	Channel settings I-21
I 2.4.2	Parameter setting for measurement data acquisition I-22
I 2.4.3	Compensation of environmental influences I-26
I 2.4.3.1	Atmospheric properties I-27
I 2.4.3.2	Material temperature I-28
I 2.5	Measurement procedure I-29
I 2.5.1	Laser aligning aid I-29
I 2.5.2	Synchronizing the displays I-30
I 2.5.3	Starting the measurement I-31
I 2.5.4	Errors occurring during a measurement I-32
I 2.6	Analysis of a measurement I-34
I 2.6.1	Controls for diagram handling I-34
I 2.6.2	Selection of standard and type of diagram I-35
I 2.6.3	Parameters I-36
I 2.6.4	Selection of the measured data to be included in the analysis I-37
I 2.6.5	Zooming and scrolling of the visible diagram segment I-38
I 2.6.6	Rescaling the diagram axes I-39
I 2.6.7	Tables I-40
I 2.6.8	Compiling a record (document) I-41
I 2.6.9	Exiting the diagram presentation I-41

	Page
I 2.7	Analysis of previous measurements I-42
I 2.7.1	Changing the selected (highlighted) card field I-43
I 2.7.2	Opening and closing a card box..... I-43
I 2.7.3	Shifting of file cards..... I-44
I 2.7.4	Loading and unloading of file cards I-44
I 2.7.5	Deleting a file card I-46
I 2.7.6	Editing of cards and card box labels I-46
I 2.7.7	Creating, renaming and deleting a card file I-47
I 2.7.8	Quitting the Cardfile menu I-48
I 2.8	Exiting the measurement program..... I-48

J “ZLM Flatness” Calibration Software

J 1	Measurement methods	J-2
J 2	Parameters	J-3
J 3	Operation	J-4
J 3.1	Elements of the "ZLM Flatness" window	J-4
J 3.2	Preparation for a measurement	J-4
J 3.3	Measurement procedure	J-6
J 3.4	Analysis of a measurement	J-8

K The "Cardfile" Program Module

K 1	Fields of the "Cardfile" window.....K-1
K 1.1	Fields with card boxes..... K-1
K 1.2	Button field K-2
K 2	Changing the selected (highlighted) card fieldK-3
K 3	Opening and closing a card box.....K-3
K 4	Creating, renaming and deleting a card file.....K-4
K 5	Shifting of file cards.....K-5
K 6	Editing of cards and card box labels.....K-6
K 7	Copying of file cardsK-7
K 8	Moving of file cardsK-8
K 9	Deleting of file cardsK-8
K 10	Record (document) of a file card.....K-8
K 11	Condensing of card files.....K-8

	Page
L	The "Document" Program Module
L 1	Elements of the "Document" window..... L -1
L 2	Editor concept..... L -1
L 3	Positioning the text cursor (insertion point)..... L -2
L 4	Selecting text, tables and graphics L -2
L 5	Scrolling the record..... L-4
L 6	Functions for editing text blocks L -5
L 7	Transfer of record contents to other Windows programs..... L -6
L 8	Searching text..... L -7
L 9	Zooming of graphics L -8
L 10	Page margins..... L -9
L 10.1	Inserting page breaks..... L -10
L 10.2	Deleting page breaks L -10
L 11	Printing..... L -11
L 11.1	Print setup L -11
L 11.2	Record heading..... L -11
L 11.3	Starting the printing process L -12
L 12	Print page preview L -13

Annexes

Annex I	Connectors for real-time interface and external read-in signal.....
Annex II	Keys and key combinations for editing in text boxes
Annex III	Influence of atmospheric properties and object temperature on the measurement result.....